


XTL 5000 -05 Mobile 800 MHz

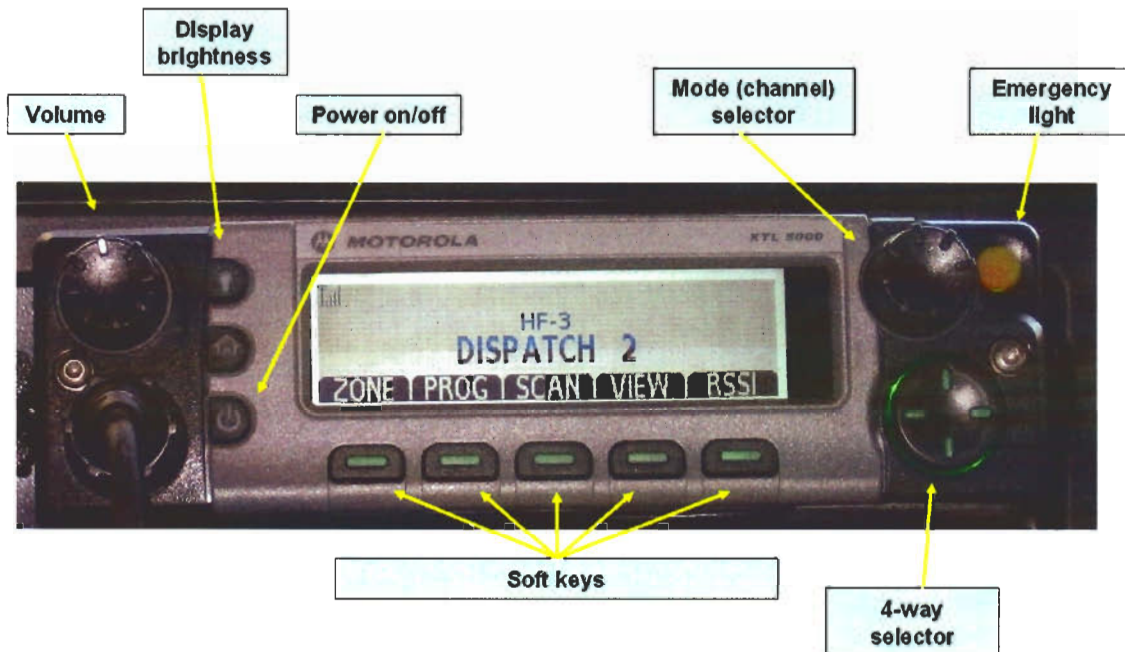

SELECT ZONE (groups): Select **ZONE** soft key. Toggle **4-way** Right/left to change zones. Push any **DEK** button when finished

SELECT MODE (channels): Rotate **Mode** switch (on top)

SCAN: Toggle **Scan** softkey on/off.

PROGRAM SCAN GROUP: Select **PROG** softkey. Menu changes. Select Scan softkey. Toggle Right/left **4-way** to change zones. Rotate **MODE** switch (on top) to change modes. With desired channel in the window, select Scan one for scan, twice for priority scan. Select **DEL** to delete channel. Select **RCL** to view scan list. Repeat up to 16 modes (channels). When finished, push any **DEK** key.

VIEW SCAN GROUP: : Select **SCAN** softkey. Menu changes. Select **VIEW** softkey. Toggle right/left **4-way** to view channels in list. When finished, push any **DEK** key or **HOME** key.

- *There are four "fleets" in this radio, County-wide, San Diego City, Conventional, and TRF. The radio cannot scan between fleets. Each fleet can have 16 channels in its scan list.*